


Design Mirror Looka


Installation Manual

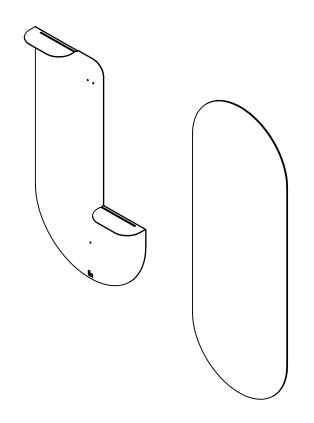




2st	Screw	2st Plug
1st	Magnet	Supplies
1st	M4 countersunk screw with M4 nut	<ul><li>- Pencil</li><li>- Level</li><li>- Impact drill</li><li>- Masonry drill Ø6mm</li><li>- Screwdriver</li></ul>
1st	Mounting plate	- Socket wrench



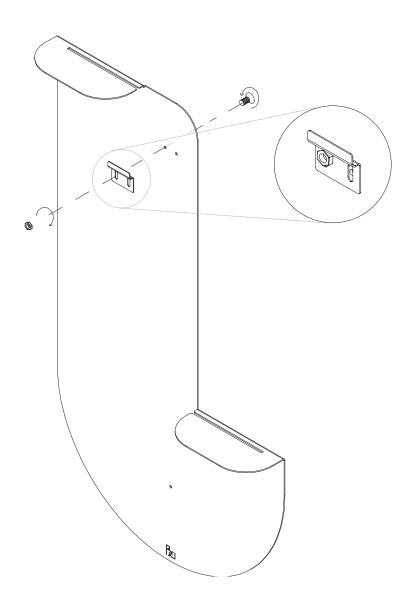


1. Mount the mounting plate to the steel base. Use the countersunk screw with M4 nut. Insert the bolt from the rear into the countersunk hole and attach the mounting plate by tightening the M4 nut.




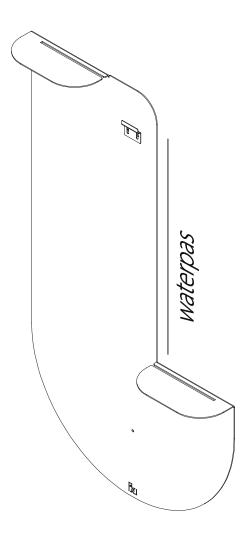

- 2. Position the steel base at the desired location on the wall. Make sure the line, as shown in the drawing, is level.
- 3. Mark the holes.
- 4. Remove the steel from the wall and pre-drill the marked holes with a 6mm (stone) drill.




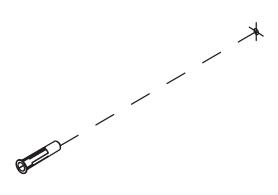

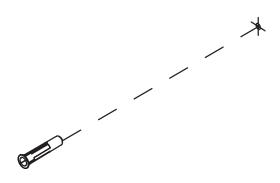


5. Place the supplied plugs in the pre-drilled holes.



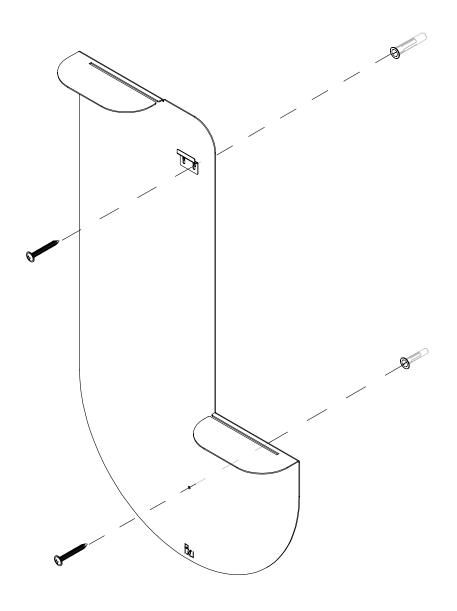


6. Attach the steel base to the wall with the supplied screws.



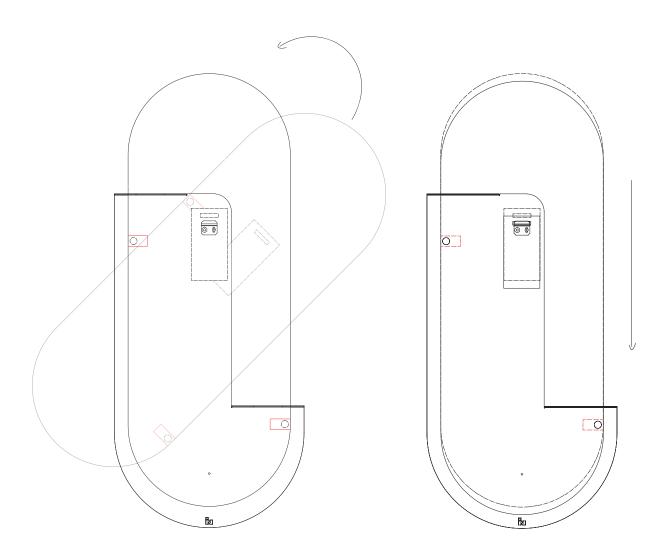

- 7. Tilt the mirror and place it into the slots. Continue until the mirror is upright. NB! Make sure that the two positioning stickers remain just below the two shelves. See red marking.
- 8. Lower the mirror onto the mounting plate.



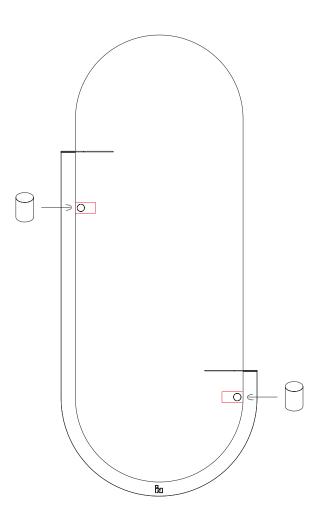


- 9. Place the two magnets next to the marking and press them behind the mirror.
- 10. Remove the tape.



Thank you for your purchase!

Have fun with your mirror Looka

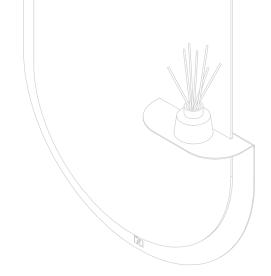

## Indusigns

van ontwerp tot realisatie